




User Manual

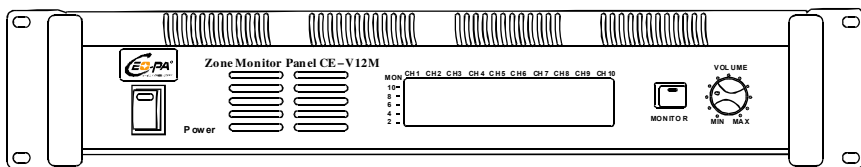


CE-V12M 10 Zone Monitor Panel

FEATURES


- 10CH inputs
- Monitor volume control
- Built-in speaker
- 5 LED indicator of level meter

FRONT PANEL

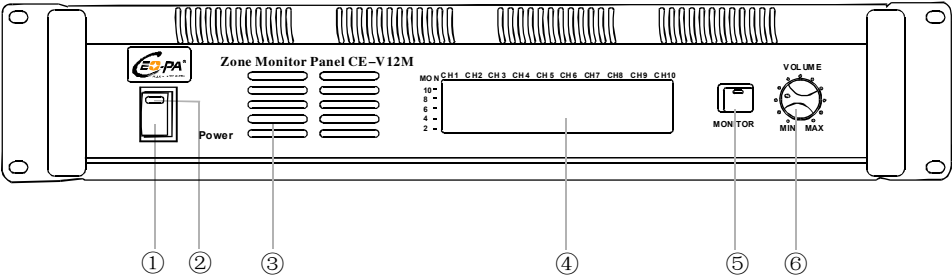


- ①Power Switch
- ②Power Indicator
- ③Monitor Speaker
- ④Display Screen
- ⑤ Channel Switch
- ⑥Monitor Volume Controller

REAR PANEL AND CONNECTIONS

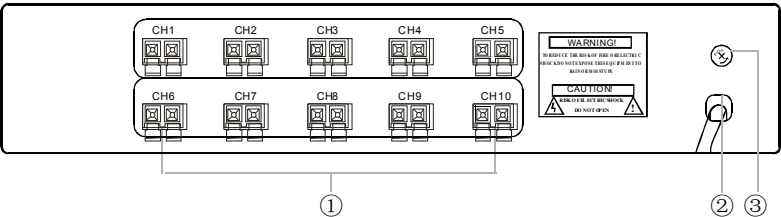

- ①Channel 1~10 input terminals
- ②AC Power cord
- ③Fuse

CONNECTION

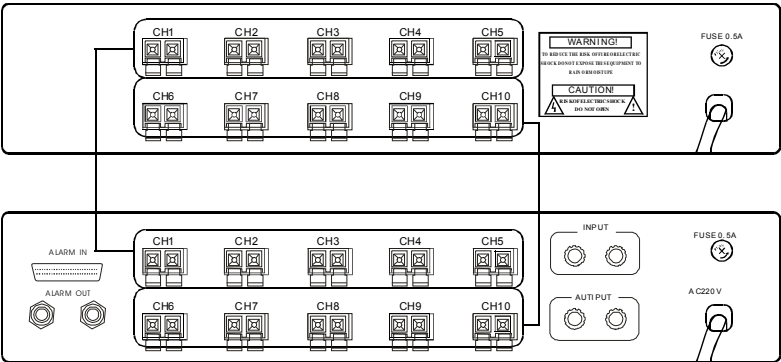

CE-V13D 10 Zone Speaker Selector

OPERATION

- 1. Make sure to connect well before turn on the power.
- 2. Select channel that you want to monitor through the MONITOR button , and the speaker on the front panel will sound.
- 3. Monitor volume can be controlled by the VOLUME CONTROLLER on the front panel.

SPECIFICATIONS

INPUT	70~100V
POWER	AC 220V± 10% , 50/60Hz
Protection	AC FUSE (0.5A) ×1
Dimensions(LxWxH)	482mm×330mm×88mm
Net weight	6Kg
Gross weight	7Kg

Specifications are subject to change without notice.



CAUTION: Do not open the equipment cover arbitrarily, so as not to electric shock. Please contact the professionals to maintain if necessary .

CEOPA corporation
www.ceopa.com