 


# **User Manual**



# CE-V18I TELEPHONE INTERFACE

# **FEATURES**

- Pickup and hold a phone-call automatically while it comes in.
- Auto hang up.

### **OPERATION**

#### 1. Auto Mode

Make connections as shown in figure, the unit will pickup and hold on a phone-call and send out an activating (short circuit) signal automatically while it comes in, and also hang up automatically when the phone call ended.

#### 2 Manual Mode

Click Manual button on the FRONT PANEL for pickup and hold on a phone—call manually and hang it up by click the button once again.

#### 3.Monitoring

There is a monitor speaker inside. For adjusting monitor volume, use Monitor knob on the front panel.

#### 4.Acknowledgment

There is an inner microphone in the rear side. It can pickup sound signal from the live and make some acknowledge to the phone–call maker.


You can also make communications with it.


## **SPECIFICATIONS**

Audio Output / Line input	0 dBV
Mic & Speaker	Build in
Activating out	Short circuit signal
Power Requirement	AC 220 - 240 V / 50∼60 Hz
Dimensions(LxWxH)	482×330×88 mm
Net weight	7 kg
Gross weight	8 kg

Specifications are subject to change without notice.

# FRONT PANEL

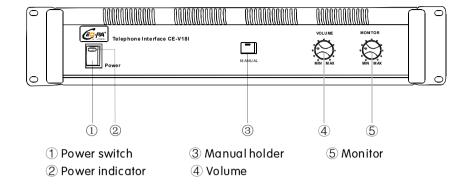


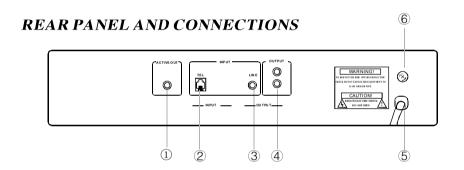

- 1 Active Out:
- ③Line in
- (5) Power cord

- 2 Telephone Connector
- ④ Audio Output
- 6Fuse

# **CONNECTION**

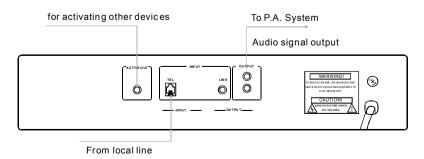



CAUTION:Do not open the equipment cover arbitrarily, so as not to electric shock.Please contact the professionals to maintain if necessary.

CEOPA corporation www.ceopa.com