

Password lock operation manual

—— S-2046B ——

Operating instructions

- (一) When the lock leaves the factory, there is already a set of factory user passwords in the lock: "1234" and a set of factory administrator passwords: "4321".
(Kind reminder: Please modify the factory password as soon as possible after receiving the lock)
- (二) Password permissions: Administrator password>User password.
- (三) After unlocking the management password, the user password will automatically restore to the factory password.
- (四) This lock has two usage modes: private and public. When leaving the factory, it defaults to private mode.
- (五) Power saving mode: Exit and enter power saving mode after 8 seconds without operating buttons

一、Unlock/Lock

- (一) Wake up the keyboard, enter the correct password, press the key to confirm, and after a long beep, the green indicator light will remain on, The locking tongue automatically retracts and unlocks within 5 seconds.
- (二) After 5 seconds of unlocking, the locking tongue automatically extends and locks.
Note:
 - 1、"Beep" three consecutive tone, indicating incorrect password input (red light)
 - 2、When unlocking, the indicator light remains on, indicating that the battery is in a low state. Please replace the No. 5 (AA) alkaline battery in the battery compartment in a timely manner. (Red light)
 - 3、The first time you unlock, you can use the factory user password "1234"/factory administrator password "43214321" to unlock. After changing the password, you can use the new password to unlock.
 - 4、After using the administrator password to unlock, the user password will automatically be restored to the factory user password "1234".

二、Change password

- (一) Wake up the keyboard, enter the original password, press the key, beep long, and the indicator light remains on.
- (二) Press and hold the key for 3 seconds until the indicator light flashes.
- (三) Enter the new password, press the key, and after a long beep, the password is successfully changed.

- Note:
- 1、Both user and management passwords can be modified following this step
 - 2、Can set 4-15 digit password, management password and user password cannot be set to the same password.
 - 3、Once the new password is successfully set, the original password will become invalid. Please remember and keep the new password safe to prevent loss.

三、Enable public mode

- (一) Wake up the keyboard, enter the management password, press the key, beep a long time, and the green light stays on.
- (二) Long press the key until there is a long beep and the green light flashes, then press the key again.
- (三) Enter the number 44, press the key, and after a long beep, enter public mode.

- Note:
- 1、This setting must use an administrator password, user passwords are not operable.
 - 2、In public mode, entering the administrator password can clear the temporary password and unlock it. Please make sure to keep the administrator password properly.

四、Set temporary password(One-time Password)

- (一) Wake up the keyboard, enter the 4-15 digit password that needs to be set, press the key to confirm, after a long beep, the green light will remain on, and the temporary password is successfully set.

- Note:
- 1、Temporary password is valid at once and automatically expires after use.
 - 2、After setting the temporary password, the indicator light flashes every 3 seconds.

五、Disable public mode

- (一) Wake up the keyboard, enter the management password, press the key, beep a long time, and the green light stays on.
- (二) Long press the key until there is a long beep and the green light flashes, then press the key again.
- (三) Enter the number 43, press the key, and after a long beep, enter public mode.

六、Enable/disable virtual password

- (一) Wake up the keyboard, enter the management password, press the key, beep a long time, and the green light stays on.
- (二) Long press the key until there is a long beep and the green light flashes, then press the key again.
- (三) Enter the number 42, press the key, and after a long beep, Enable virtual password.
- (四) Enter the number 41, press the key, and after a long beep, Disable virtual password.

- Note:
- 1、Up to 16 digits of password can be entered, and password verification will pass as long as there is a continuous password that matches the set password.

- 2、When the virtual password function is enabled, garbled characters can be entered before and after the correct password to mask the real password and prevent others from peeping..

七、Special Function Description

(一) Restore factory settings:

Press and hold the RST of the lock body, hold it for a long time until it beeps and then release it. The password will be reset to the factory settings and will not be restored to the mode (public and private mode)

(二) Password error prompt:

Entering the wrong password four times in a row to maliciously unlock will lock the keyboard for 60 seconds and emit a prompt sound. During this time, any key will be invalid. After the lock is released, a beep will sound

(三) Emergency power supply unlocking:

When the battery voltage is low and cannot be unlocked, can used emergency power supply to unlock through the TYPE-C interface.

(四) Low voltage battery prompt:

Start the keyboard, the red indicator light is constantly on, and at this time, the lock is in a low voltage working state. Please replace the battery with a new one in a timely manner.(DC6V alkaline battery(AA1.5V*4pcs))

