

# XT Pametna brava za ormarice - Model X206J (PIN-Metal)

"C" - crveno dugme (red button)

"↔" - zeleno dugme (green button)

## Operating instructions

- (一) When the lock leaves the factory, there is already a set of factory user passwords: "1111" and a set of factory administrator passwords: "000000" inside the lock body.  
**(Kind reminder: Please modify the factory password as soon as possible after receiving the lock)**
- (二) Password permissions: Administrator password>User password.
- (三) This lock has two usage modes: private and public. When leaving the factory, it defaults to private mode.
- (四) The "↔" key is the password confirmation key, and the "C" key is the clear key. The green light is on when the password is correct, and the yellow light is flashing when the password is incorrect.

## 一、Independent mode (personal mode)

- (一) Enter the latest password you have set, consisting of 4-10 digits (if not modified, please use the factory password "1111"), and press the "" key to unlock
- (二) Please pull outward when the green light is on to open the door.
- (三) 5 seconds after unlocking, the locking tongue automatically extends and locks.

Note: 1、"Didi" three consecutive beeps indicate incorrect password input (yellow light)

- 2、When unlocking (red light), it flashes and is accompanied by four group sound alarms, indicating that the battery is in a low battery state. Please replace the No. 5 (AA) alkaline battery in the battery compartment in a timely manner.
- 3、The first time you unlock, you can use the factory user password "1111"/factory administrator password "000000" to unlock. After changing the password, you can use the new password to unlock.

## 二、Open mode (public mode)

- (一) Lock closing: When the lock is in the unlocked state (i.e. the lock tongue is retracted), push the cabinet door to the closed state, enter a custom 4-10 digit password, and press the "" key to confirm to close the lock..

Note: The password set by the user is currently valid, and it will automatically expire after unlocking.

- (二) Unlock: Enter the password set when closing the door, press the "↔" key, the green light will light up, the lock tongue will retract, and the cabinet door will be opened.

- (三) Enable occupancy prompt: Enter C ↓ 8 ↓, enter the management password, press "↓", and when the cabinet is in use, the occupancy prompt light will flash every 3 seconds (red light).
- (四) Turn off occupancy prompt: Enter C ↓ 9 ↓, enter the management password, and press "↓"

### 三、Unlock mode conversion method

#### **Note: Factory default private mode**

- (一) Private mode to public mode: Enter C ↓ 4 ↓, enter the management password, and press "↓"
- (二) Public mode to private mode: Enter C ↓ 5 ↓, enter the management password, and press "↓".

### 四、Change password

#### (一) User password modification method:.

- 1、Press the "↓" key twice in a row, the yellow light will flash. Enter the old password, press the "↓" key to confirm, enter the new password, and press the "↓" key to confirm,
- 2、The green light stays on once, with a beep, indicating that the user's password has been successfully changed.

#### (二) Management password modification method:.

- 1、Long press the "↓" key for 5 seconds, the yellow light will flash. Enter the old management password, press the "↓" key to confirm, enter the new management password, and press the "↓" key to confirm,
- 2、The green light stays on once, with a beep, indicating that the user's password has been successfully changed.

**Note:**

- 1、The lock in public mode does not require changing the user password, and can be customized when closing the lock. The password is the unlocking password.
- 3、The user password consists of 4-10 digits, and the management password consists of 6-10 digits. It can be saved for a long time even when power is off, and the password can be changed on its own.

### 五、Password protection

- (一) When the password is entered incorrectly 5 times in a row, the system will automatically lock it for 1 minute, and the yellow light will flash slowly. At this time, the operation buttons will not respond, which can effectively prevent malicious password theft.
- (二) Enable virtual password: Enter C ↓ 6 ↓, enter the management password, and press "↓".
- (三) Turn off virtual password: Enter C ↓ 7 ↓, enter the management password, and press "↓".
- (四) Note: After enabling this function, the entered number includes the correct password to unlock. For example, if the factory password is 1111, enter: 1231231111. The dashed password can be entered up to 29 digits to prevent thieves from peeping

## 六、Switch mute mode

- (一) Long press the number 0 key, and after hearing two beeps, the mute mode will be activated.
- (二) Long press the number 0 key, hear a beep, and the green light will light up. Mute mode will be turned off.

## 七、Initial settings

- (一) Press and hold the set button, the red light will light up, a long beep will sound for 5 seconds, the green light will light up, and the operation is successful.

