



Standalone Cabinet Lock User Manual


1) Download the TTLock APP

Scan the QR code to download the APP:

Android




iOS

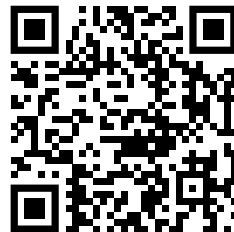


2) Add the lock to the APP

Open the TTLock APP. Click "Add Lock" -> "All Locks" -> Wake up the lock pressing the fingerprint sensor -> Click "+"

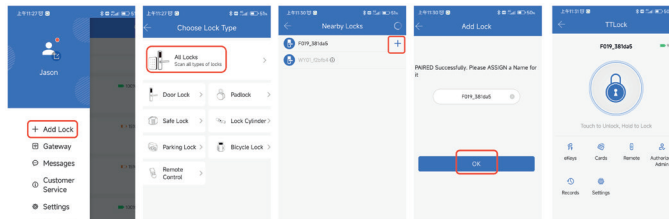


3) Add and manage fingerprints

Click "Fingerprints" -> "Add Fingerprint" -> Enter a name and select the expiration period -> "OK" -> Press with your finger several times on the sensor -> "Beep,Beep" two sounds -> Added successfully.

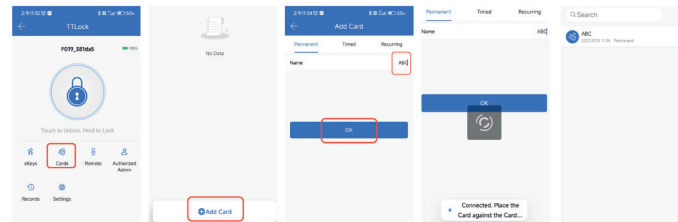


After adding the fingerprint, you can press on it to modify the name, the validity period, see the unlock records or to delete it.

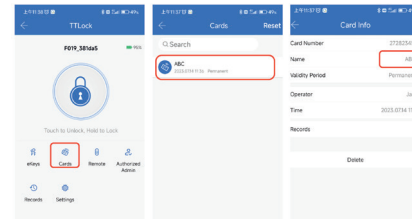


4) Add eKeys (Temporary Keys)

Click “eKey” -> “Send eKey”
Choose the repetition mode: timed, permanent, one-time or recurring.
Fill in the recipient's information -> Click “Send”.

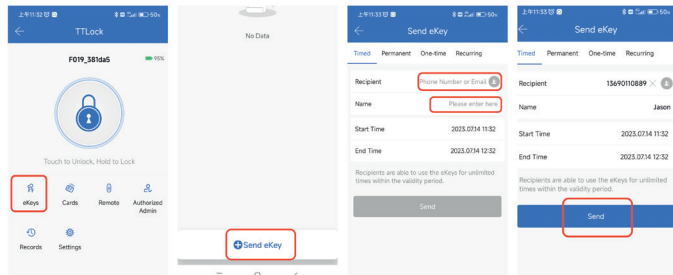

5) Unlock with APP


We can also unlock the lock with the APP. Click on the unlock icon.

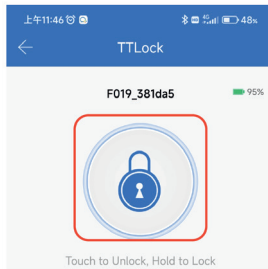

After 5 seconds, the lock will automatically lock.


6) Check unlock records

Select the lock on the APP and press on the “Records” icon.

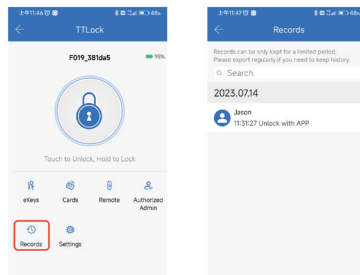

7) Add more admins


Click “Authorized Admin” -> “Create Admin” -> Fill in the recipient's account number, name, time and other information -> “Send”.
The authorized administrator can unlock, add cards, query records, etc.

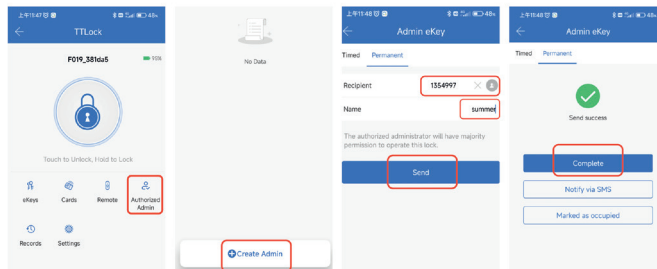

Other Function

E-Key

- 1.Insert E-Key
- 2.Put any finger on sensor, green light on, unlocked
- 3.Pull the door open

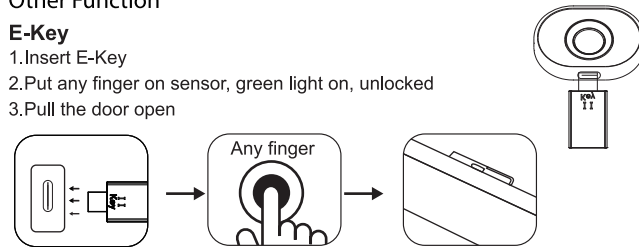


2. Low battery warning

In case of low battery, to put on the registered fingerprint, green light flashes once, and red light flashes thrice, then a long green light, unlocked. To change the battery immediately after door open
Note: Use 4XAAA alkaline battery, not take Carbon battery

3. Outer Power Supply


When low battery, can connect power bank or mobile plug for outer power supply

After unlocked, change the battery immediately

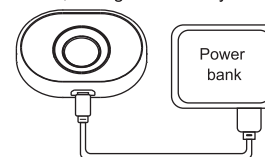


Installation Instructions


1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

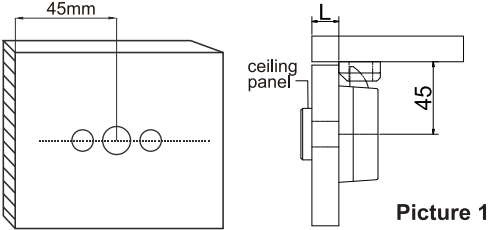


Picture 1

wire connection

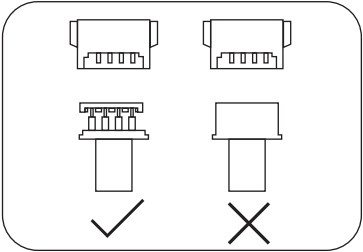


		Door Thickness (mm)	Screw
	1	14mm~16mm	M4X20
	2	16mm~18mm	M4X22
	3	19mm~21mm	M4X25

2. Wire goes through the center hole and fix the front panel by screw M4X22, then connect the back lock, (Tide up the wire not crush), fix back lock by screw ST3.5X18

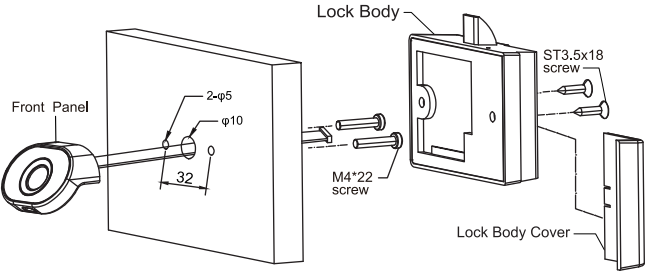


Picture 2

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

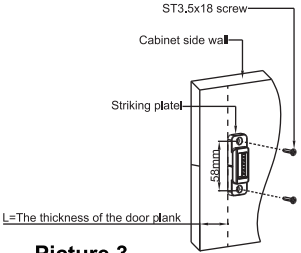


Picture 3

COMPONENT

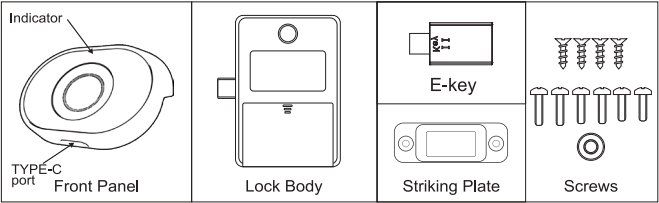

INSTALLATION DRAWING

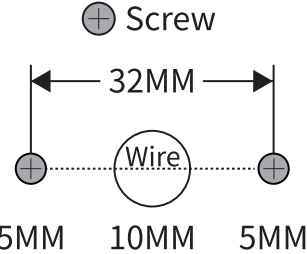

Follow the drawing to drill the hole