








3.5 meter combined pole install instruction

Accessories	lightning rod ①	rubber seal ②	bullet camera ③	PTZ camera ④	top pole ⑤	extension pole ⑥	cover ⑦	lock nut ⑧	base pole ⑨
	1pc	3pcs	bracket 1pc	bracket 1pc	1pc	1pc	1pc	1pc	1pcs
									
			optinal						

1

2

3


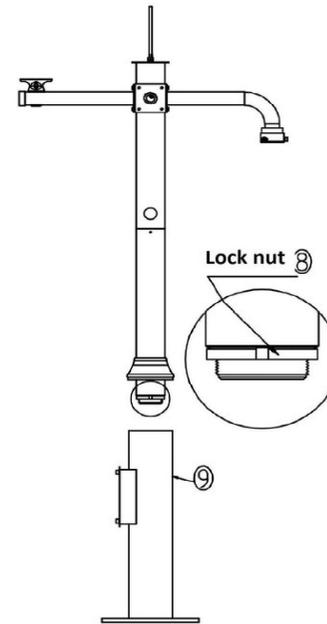
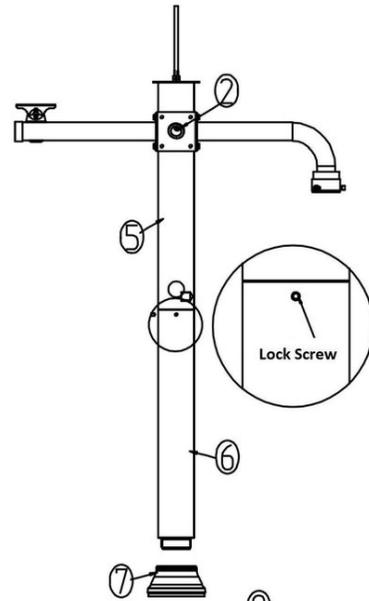
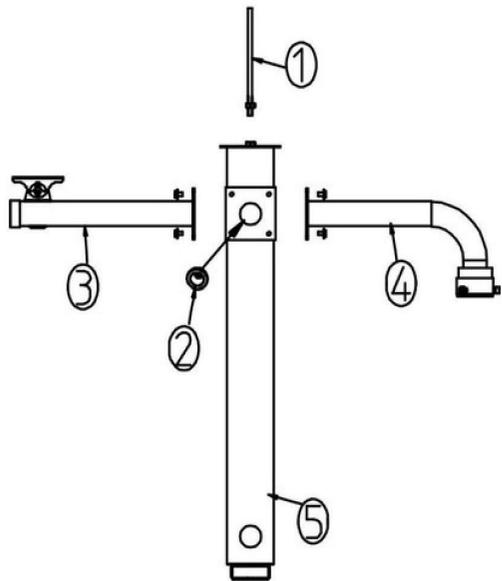


Install PTZ bracket and bullet bracket onto any 2 directions on the top pole, and seal other 2 directions not using with plastic plugs. Install the lightning rod on the top

Assembly the top pole and extension pole, tight the lock screw on the extension pole after assembly. Install the lock nut and turning part at the bottom of extension pole

Assembly the extension pole onto base pole, tight the lock nut

Instruction for Buried Root

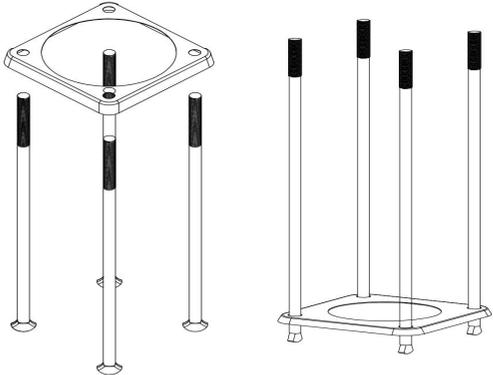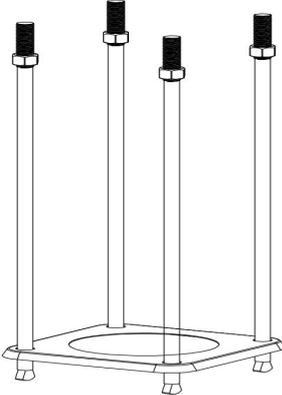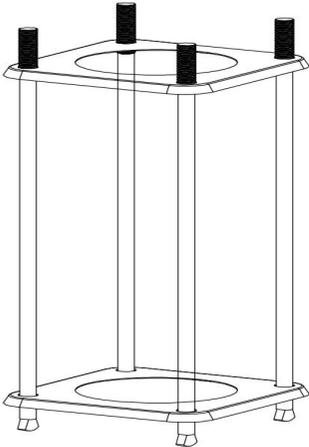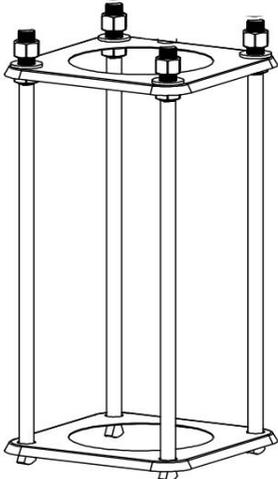①		STEP 1		STEP 2		Tips: 1. Assemble the buried root as the left steps 2. Dig a big hole (hole size: 600mm*600mm) 3. Put the buried root into the hole 4. Fill the concrete into the hole until the level of up plate. 5. Remove the washer and nuts from the screw arbor 6. Connet the pole base and the buried root with washers and nuts
	screw arbor 4 PCS					
②						
	plate 2 PCS					
③		STEP 3	STEP 4	Finished real picture for buried root	Recommendation dimensions for concrete basement	
	Hex nut M14 4 PCS					
④						
	washer 4 PCS					
⑤						
	Hex nut M14 4 PCS					
