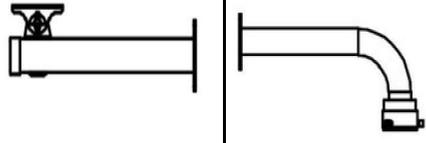

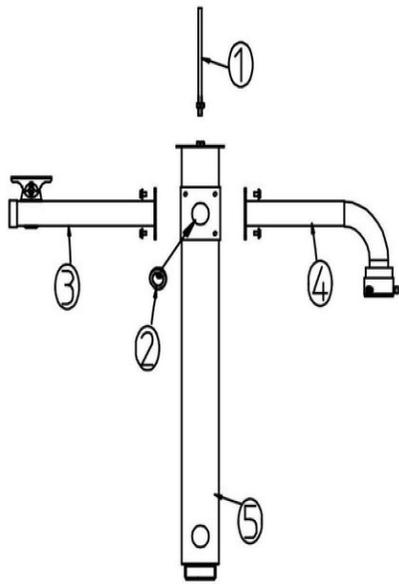


6 meter combined pole install instruction

Accessories	lightning rod ①	plastic plug ②	bullet camera ③	PTZ camera ④	top pole ⑤	extension pole ⑥	turning part ⑦	lock nut ⑧	base pole ⑨
	1pc	3pcs	bracket 1pc	bracket 1pc	1pc	3pc	1pc	1pc	1pcs
									

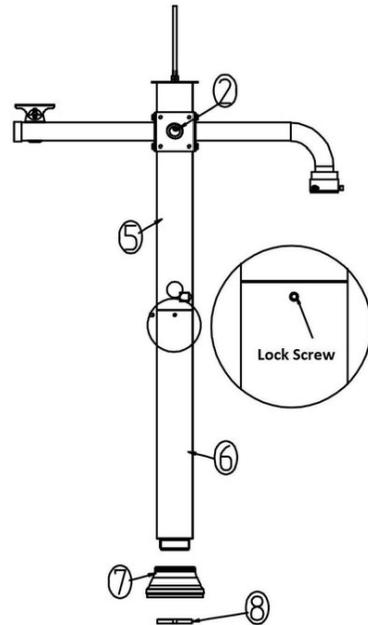
optinal

1




Install PTZ bracket and bullet bracket onto any 2 directions on the top pole, and seal other 2 directions not using with plastic plugs. Install the lightning rod on the top

2



Assembly the top pole and extension pole, tight the lock screw on the extension pole after assembly. Install the lock nut and turning part at the bottom of extension pole












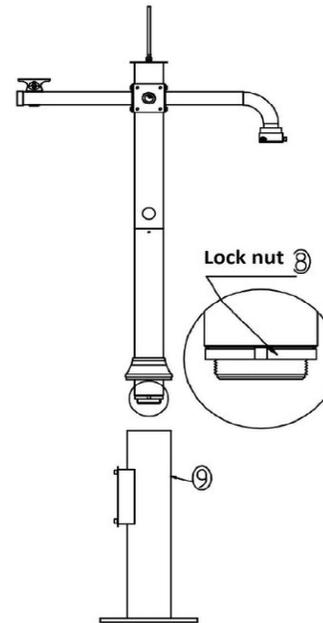
3



Assembly the extension pole onto base pole, tight the lock nut



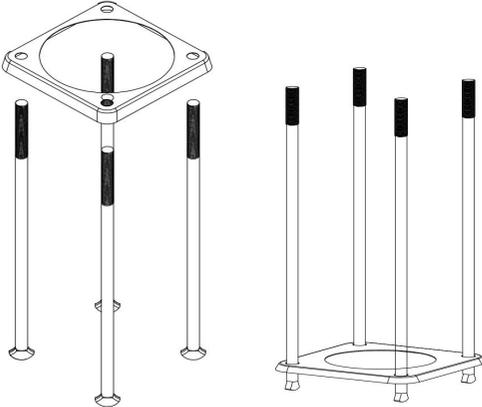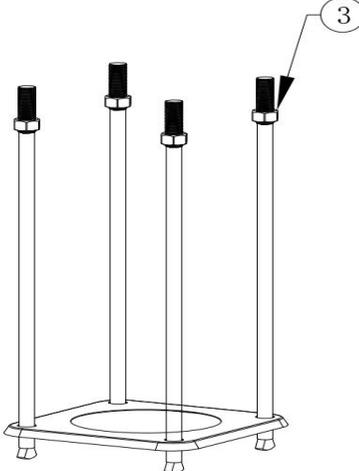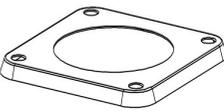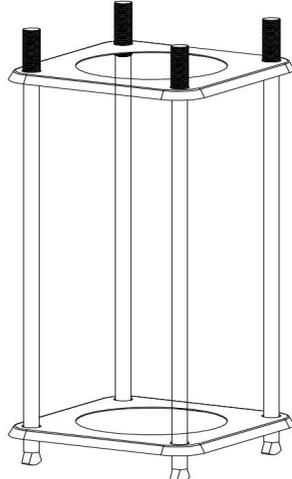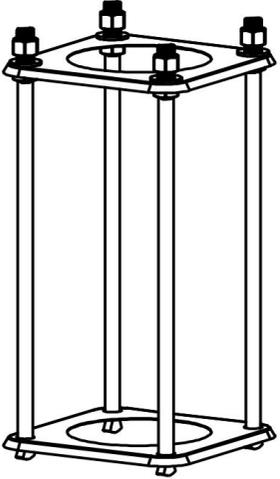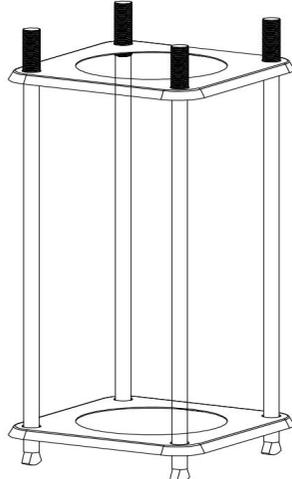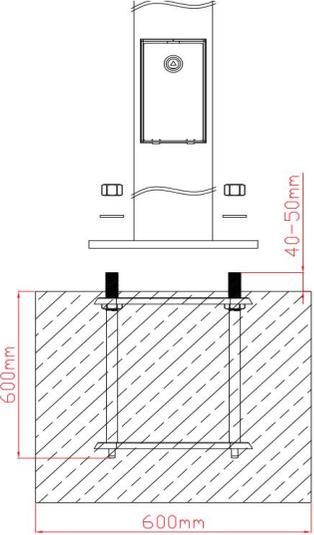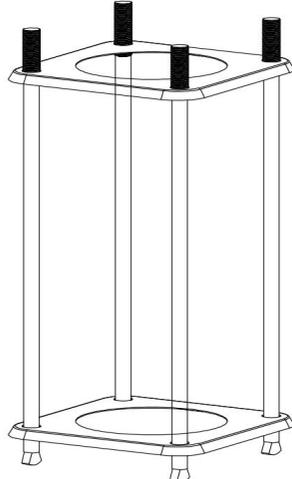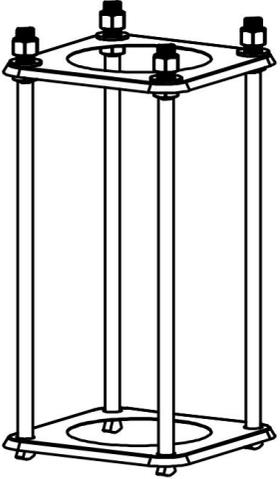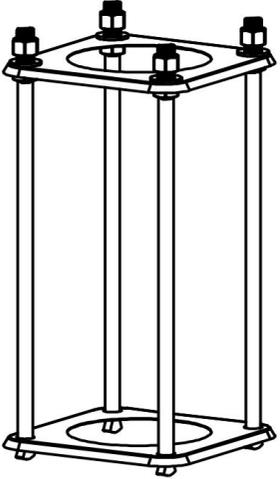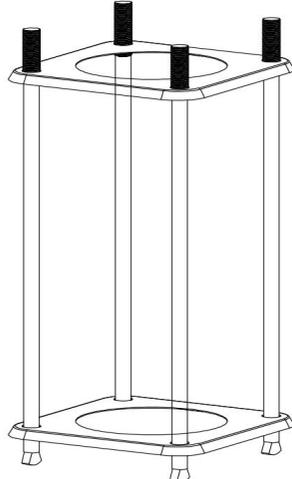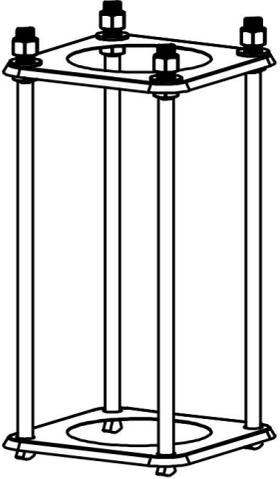Instruction for Buried Root

①		STEP 1		STEP 2		Tips: 1. Assemble the buried root as the left steps 2. Dig a big hole (hole size: 600mm*600mm) 3. Put the buried root into the hole 4. Fill the concrete into the hole until the level of up plate. 5. Remove the washer, nuts from the screw arbor 6. Connet the pole base and the buried root with washers and nuts
	screw arbor 4 PCS					
②				STEP 4		
	plate 2 PCS					
③		STEP 3		Recommendation dimensions for concrete basement		
	Hex nut M18*9 4 PCS					
④						
	washer 4 PCS					
⑤						
	Hex nut M18*18 4 PCS					