




# Quick Start Guide

---

EFace10

Version: 1.0

# Overview

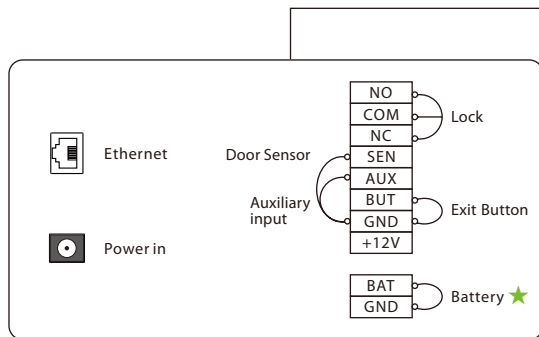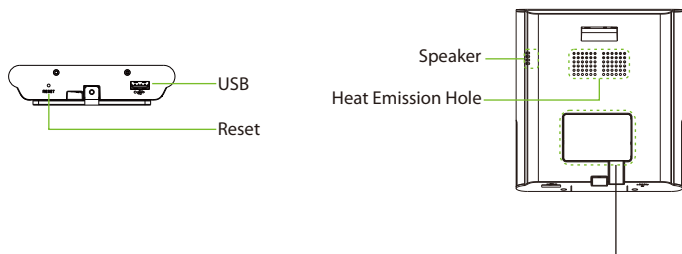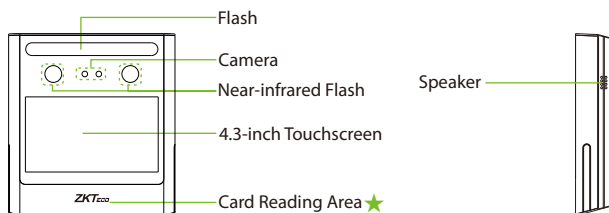

**Note:** Features and parameters with ★ mark are not available in all devices.

## Installation Environment

Please refer to the following recommendations for installation.



INSTALL INDOORS  
ONLY



AVOID INSTALLATION  
NEAR  
GLASS WINDOWS




AVOID DIRECT  
SUNLIGHT  
AND EXPOSURE




AVOID USE OF ANY  
HEAT SOURCE  
NEAR THE DEVICE

## Recommended Standing Position

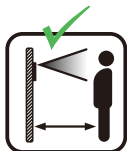


KEEP EFFECTIVE  
DISTANCE OF  
0.3-2m

## Standalone Installation

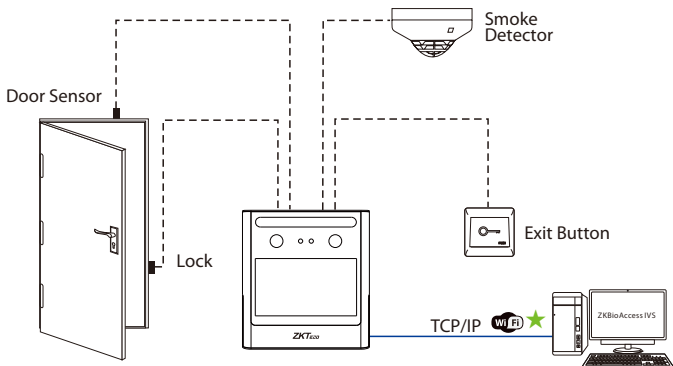

## Power Connection

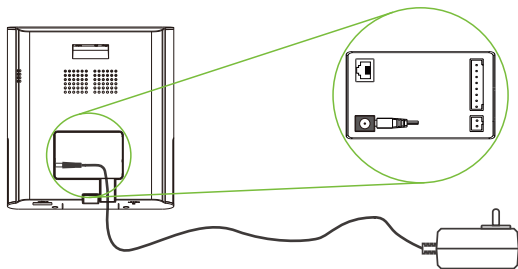


### Recommended AC Adapter

- 1)  $12V \pm 10\%$ , at least 1500mA.
- 2) To share the power with other devices, use an AC Adapter with higher current ratings.

## Ethernet Connection

Connect the device and computer software over an Ethernet cable. As shown in the example below:

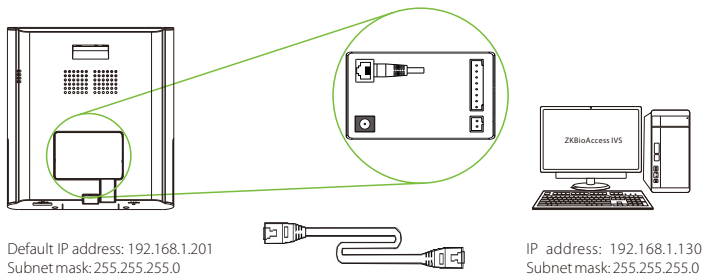

Default IP address: 192.168.1.201  
Subnet mask: 255.255.255.0

IP address: 192.168.1.130  
Subnet mask: 255.255.255.0


Click on [COMM.] > [Ethernet] > [IP Address], input the IP address and click on [OK].

**Note:** In LAN, the IP addresses of the server (PC) and the device must be in the same network segment when connecting to the **ZKBioAccess IVS** software.



## Lock Relay Connection

The system supports **Normally Opened Lock** and **Normally Closed Lock**. The **NO Lock** (normally opened when powered) is connected with 'NO' and 'COM' terminals, and the **NC Lock** (normally closed when powered) is connected with 'NC' and 'COM' terminals. An example with NC lock is shown below:

Device not sharing power with the lock

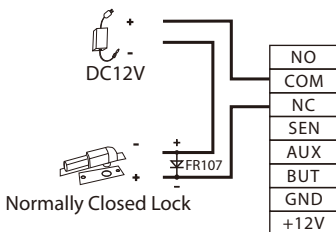

## Door Sensor, Exit Button & Auxiliary Input Connection

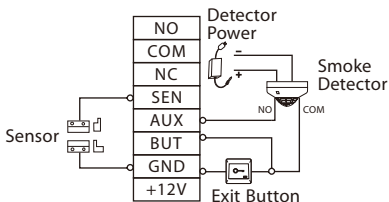
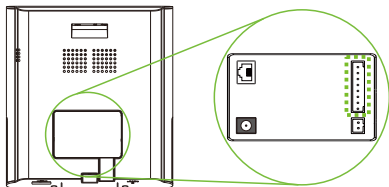


# User Registration

When there is no super administrator set in the device, click on ☰ to enter the menu. Add a new user and set User Role to Super Admin, then the system requests for the administrator's verification before entering the menu. It is recommended to register a super administrator initially for security purposes.

## Method 1: Registering on the device


Click on ☰ > [User Mgt.] > [New User] to register a new user. The options include entering the user ID and Name, setting User Role and Verification Mode, registering Face, Card Number★, Password, and adding User Photo.

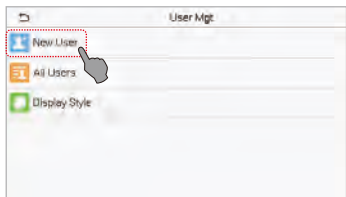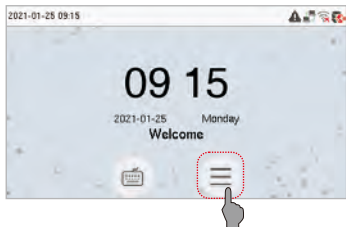

## Method 2: Register on ZKBioAccess IVS software

Please set the IP address and cloud service server address in the Comm. Menu option on the device.

1. Click **[Attendance]** > **[Attendance Device]** > **[Device]** > **[Search]** to search the device on the software. When an appropriate server address and port is set on the device, the searched devices are displayed automatically.

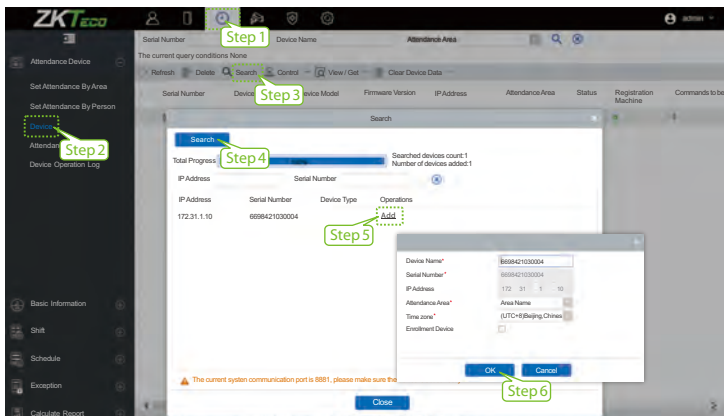



2. Click **[Add]** in operation column, a new window will pop-up. Select Attendance Area and Time zone from each dropdowns and click **[OK]** to add the device.
3. Click **[Personnel]** > **[Person]** > **[New]** and fill in all the required fields to register a new users in the software.
4. Click **[Attendance Device]** > **[Device]** > **[Control]** > **[Synchronize Software Data to the Device]** to synchronize all the data to the device including the new users.

For more details, please refer to the ZKBioAccess IVS User Manual.


### Method 3: Register on the phone

Once the ZKBioAccess IVS software is installed, the users could enroll their face via a browser application on their own mobile phone.

1. Click **[Personnel]** > **[Parameters]**, input “http://Server address: Port” in the QR Code UGL bar. The software will automatically generate a QR code. Scan the QR code or login onto “http://Server address: Port/app/v1/adreg” by the mobile phone to register users.

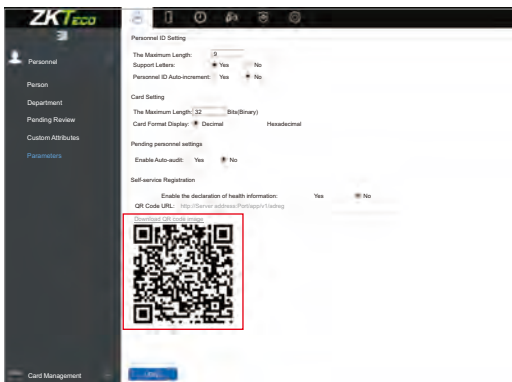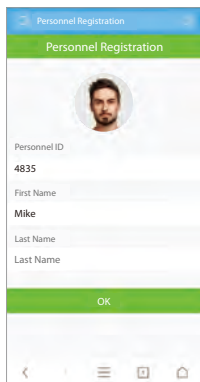



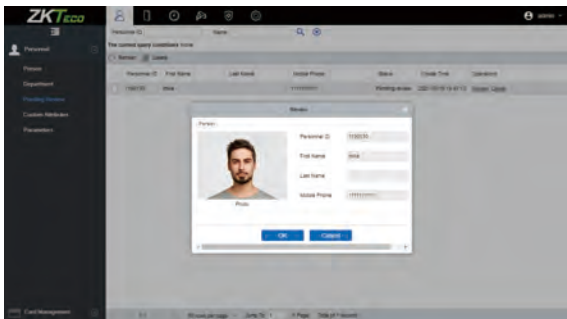

2. The users will be displayed in **[Personnel]** > **[Pending Review]**, click on **[Review]** option and assign a department and click **[OK]** to successfully add the user.







# Ethernet and Cloud Server Settings

Click on  > [COMM.] > [Ethernet] to set the network parameters. If the TCP/IP communication of the device is successful, the icon  will be displayed in the upper right corner of the standby interface.

Click on  > [COMM.] > [Cloud Server Setting] to set the server address and server port, that is, the IP address and port number of the server after the software is installed. If the device communicates with the server successfully, the icon  will be displayed in the upper right corner of the standby interface.

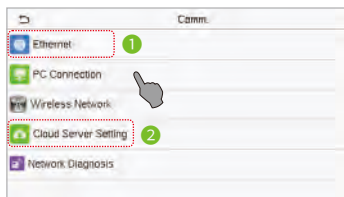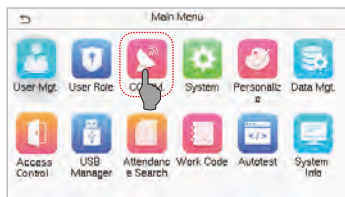

Ethernet	
IP Address	192.168.163.99
Subnet Mask	255.255.255.0
Gateway	192.168.163.1
DNS	0.0.0.0
TCP COMM.Port	4370
DHCP	<input type="checkbox"/>

Cloud Server Setting	
Server Mode	ADMS
Enable Domain Name	<input type="checkbox"/>
Server Address	0.0.0.0
Server Port	8081
Enable Proxy Server	<input type="checkbox"/>
HTTPS	<input type="checkbox"/>


## Note:


While pairing the device with ZKBioAccess IVS software. Make sure that the option **Enable Domain Name** is disabled and the correct server address and port are entered.

**Server Address:** Set as the IP address of the ZKBioAccess IVS server.


**Server Port:** Set as the service port of ZKBioAccess IVS.



## Access Control Setting

Click on  > [Access Control] to enter the access control management interface and set relevant parameters of access control.

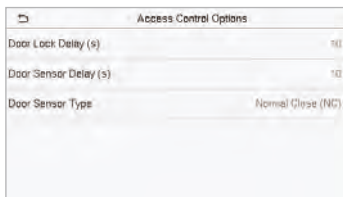

## Attendance Record

Click on  > [Attendance] > [Attendance Record] to enter the record query interface, input the user ID and select the time range, the corresponding attendance record will be displayed.

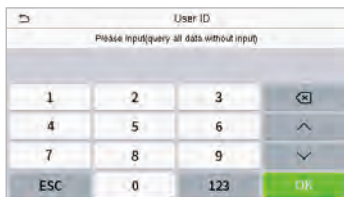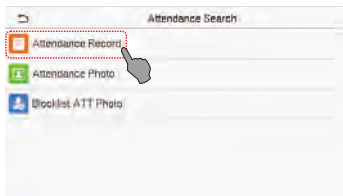

ZKTeco Industrial Park, No. 32, Industrial Road,  
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

[www.zkteco.com](http://www.zkteco.com)

